

# Pro'sKit®



Certificate Number: TW98/12323QA

**寶工實業股份有限公司**  
**PROKIT'S INDUSTRIES CO., LTD.**

<http://www.prokits.com.tw>


E-mail: [pk@mail.prokits.com.tw](mailto:pk@mail.prokits.com.tw)

# Pro'sKit®

MA-1003MA ( AC 110V-120V 60Hz )

MA-1003MF ( AC 220V-240V 50Hz )

Desk Type Magnifier Lamp

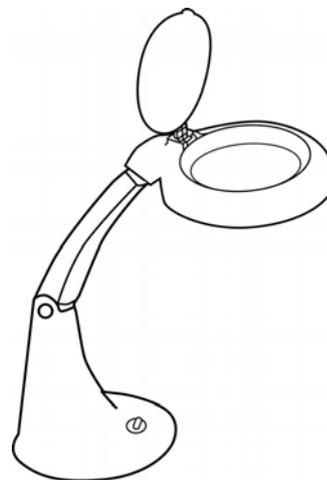

## User's Manual

1<sup>st</sup> Edition: 2009

©2009 Copy Right by Prokit's Industries Co., Ltd

## Desk Type Magnifier Lamp

### Desk Type Magnifier Lamp

#### MA-1003 MA / MA-1003MF

Thank you very much for purchasing Pro'skit Desk Type Magnifier Lamp. The Desk Type Magnifier Lamp is ideal for precise work in home, office and workshop as well as a lot of other important places. Before using the Magnifier Lamp, please read the following instructions.

#### 1. Specification:

- 1) Complies with CE safety standards
- 2) Lens material: glass  $\varnothing$  100mm (4")
- 3) Diopter: 3 diopter (1.75X) / 12diopter (4.00X)
- 4) Light source: T4 G10q 12W circular fluorescent lamp
- 5) Voltage: AC 110~120V 60 Hz / AC220-240V AC 50Hz
- 6) Supplied with electronic ballast
- 7) Product size: Base: 18\*15cm, Height 37.0cm

#### 2. How to use:

- 1) Before use, remove all packing from around the lamp.
- 2) Put the lamp on the horizontal table.
- 3) Insert the plug into a conveniently located electrical socket.
- 4) Switch on using the ON/OFF switch located on the surface of the base.
- 5) To place the head in the desired position.

## Desk Type Magnifier Lamp

#### 3. Replacing the Tube:

- 1) Always switch off, remove the plug from the mains supply and allow the lamp to cool before changing the tube.
- 2) Rotate the head so you can see the underside. Using a suitable screwdriver remove the five small screws that secures the diffuser to the head of the lamp.
- 3) Remove the diffuser and place safely to one side.
- 4) Remove the tube from the head and gently unplug the 4-pin connector-discard the old tube safely.
- 5) Gently push-fit the 4-pin connector onto the new tube ensuring it is pushed on fully.
- 6) Position the new tube into the head, replace the diffuser and tighten the 5 screws to hold it in place.

#### 4. Caution for safe using:

- 1) Indoor use only.
- 2) Environment temperature:  $-20^{\circ}\text{C}\sim 40^{\circ}\text{C}$ .
- 3) Humidity:  $\leq 95\%$ .
- 4) Never disassemble the magnifier lamp unless you are a qualified electrician.
- 5) Plug must be taken out while repairing the magnifier lamp.
- 6) Never leave the lens unattended in direct sunlight or where light can shine through it.  
This constitutes a fire hazard.